BOREAL

OPX HEAD (OPEN PATH TRANSCEIVER HEAD)


- Worlds longest line-of-sight measurement available
- · Align optical path during operation
- No power at the head required

SET

FORGET

DETECT



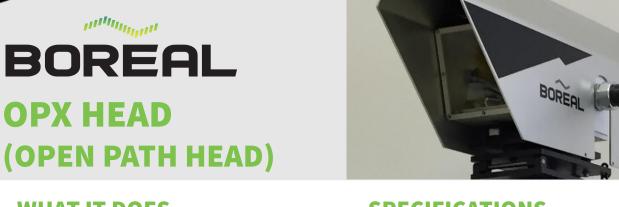

WHAT IT DOES

• The OPX Head is a measurement head for our series of GasFinder3-DC analyzers that provides a path integrated (or average) concentration in the active measurement path (ambient atmosphere)

HOW IT WORKS

- The analyzer can be mounted locally or remotely
- Fibre optic cable carries the laser light from the analyzer to the remotely mounted OPX Transceiver Head
- The active measurement path is formed by the laser passing through the ambient atmosphere and being returned by the retroreflector
- The returning laser light is then collected and the signal is carried back to the analyzer via CAT6 cable
- The ppm-m concentration is then transferred from the analyzer to the PLC or DCS

RESPONSE CELL

- To validate that the GasFinder3-DC is responding appropriately to the target gas, a response cell can be inserted into the active measurement path
- While the GasFinder3-DC is designed to report any instrument or measurement errors, this response test mitigates the small remaining risk of an instrument in an unreported error condition
- The response cell is **NOT a field calibration**
- Depending on how the response cell is held in the active measurement path the path length can change and therefore so will the indicated reading and one cannot expect identical readings from the response cell every time it is put into the path

OPTICAL ALIGNMENT

- Install the OPX Head/X-Y Mount inside the Rain/Dust Enclosure
- Roughly align the Rain/Dust Enclosure to the retro
- Connect and turn-on the visible laser from the troubleshooting and diagnostic kit
- Adjust the alignment screws on the X-Y Mount so the visible laser beam is aimed at the retro (the retro will glow red)
- Connect and turn-on the Remote Light Meter (RLM) from the troubleshooting and diagnostic kit
- Adjust the X-Y mount vertically and horizontally so that the highest light level is registered on the RLM (it is assumed that you are in the middle of the retro)
- Tighten the red screws on the X-Y mount and align the scope so that the crosshairs are in the middle of the retro
- Remove visible laser and RLM and connect fibre and coax cables

SPECIFICATIONS

OPERATIONAL SPECS

- Measurement Principle: TDLAS
- **Open-Path Length:** 3 750m (10 2460 ft)
- **Ambient Temperature:** -45°C 80°C (-49°F 176°F)
- Ambient Humidity: operating; non-condensing 5-95% RH
- Opacity: can withstand 95% beam block

SIGNAL CONNECTOR SPECS

- Optical Connection: FC/APC Female (Signal-In)
- CAT6Connection: RJ-45 Female (Signal-Out)
- **Aiming Laser Connection:** FC/APC Female (Signal-In)
- Maximum Cable Length: 500m
- Power Supply: None Needed

PHYSICAL SPECS w/ RAIN/DUST ENCLOSURE

- **Dimensions w/ X-Y MOUNT:** 311 x 139 x 203mm (12.3 x 5.4 x 7.9 in)
- Weight: 4 kg (9 lbs)
- **Dimensions w/ Enclosure:** 457 x 138 x 195mm (18.0 x 5.53 x 7.7in)
- Weight w/ Enclosure: 5.2 kg (11.5 lbs)
- Alignment Scope: 3/9 x 40
- Protection: IP66/NEMA 4x
- Material: Anodized Aluminium
- Window: Borosilicate, fused silica, or sapphire
- Hazard Area Classification: Class 1 Zone 2 A,B,C,D

APPLICABLE ACCESSORIES





RAIN/DUST ENCLOSURE

RESPONSE CELL

X-Y MOUNT



DIAGNOSTIC KIT



HEATED RETRO



FDC